VIDE-V28877

SHARP SERVICE MANUAL

CODE : 00ZCEST7SM//E

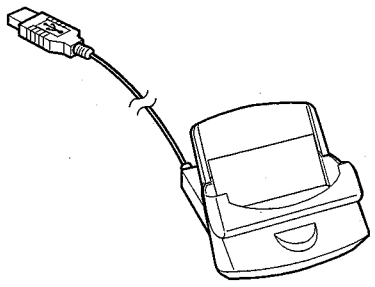

REPLACEMENT MODEL

CE-ST6
** MODEL CE-ST7**

DOCKING STATION

1. PRODUCT OUTLINE

Docking Stations (CE-ST6/CE-ST7) are for the SL-5000/SL-5500.
(as of January 2002)

CE-ST6 : For SL-5000 only
CE-ST7 : For SL-5500 only

When the Main Unit (SL-5000 or SL-5500) is set to the Docking Station, the following operations can be performed.

- Synchronize data can be performed between PC and the Main Unit only by pressing the SYNC button of the Docking Station.
- The Main Unit can be charged by connecting the AC adapter (EA-70) of the Main Unit to the Docking Station.

2. SPECIFICATIONS

Connector used : USB, SHARP I/O PORT
Dimensions : Approx. 86 (W) x 65 (H) x 107 (D) mm
Approx. 3.4 (W) x 2.6 (H) x 4.2 (D) inches
Cable length: Approx. 2 ± 0.15 m (6.56 ±0.49 ft.)

3. PART NAMES AND FUNCTIONS

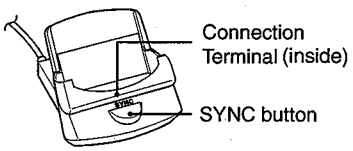

Connection Terminal: Enables connection with the SHARP I/O PORT of the Main Unit.

SYNC button: Starts synchronization between the Main Unit and a PC.
SL-5000 only : (The factory default does not support the SYNC button function.)

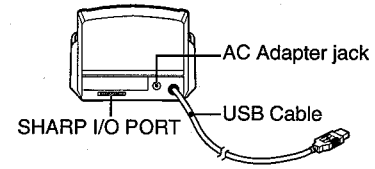

SHARP I/O PORT: Enables connection to a PC, etc. with the specified connection cable, etc.

AC Adapter jack: Enables connection of the AC adapter for the Docking Station.

USB Cable: Enable connection to the USB port.

4. CONNECTING

Connecting the Main Unit to your PC

To synchronize data with a PC, connect the Main Unit to your PC using the Docking Station. Refer to the PC operation manual for more information regarding connection.

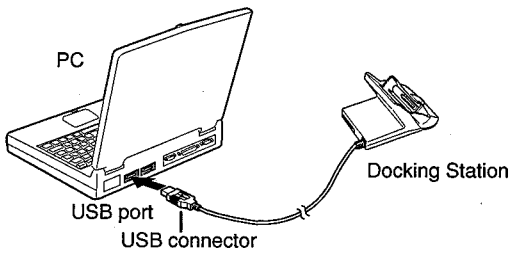

1. Connect the USB connector of the Docking Station to the USB port of the PC.

Notes:
- The USB cable of the Docking Station is used to connect the Main Unit to a PC (PC link, etc.). It is not used for charging.
- For details on synchronization with a PC, etc., see the on-line operation manuals (on the CD-ROM) of the Main Unit for the PC link software.

Parts marked with "⚠" are important for maintaining the safety of the set. be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

SHARP CORPORATION

This document has been published to be used for after sales service only.
The contents are subject to change without once.

5. CHARGING

Charging using the Docking Station

1. Connect the AC power cord to the AC adapter.

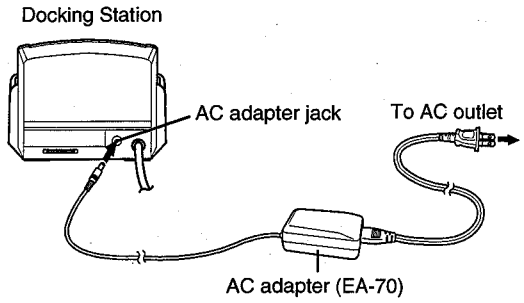

2. Plug the AC adapter connector into the Docking Station.
3. Plug the AC power cord into an AC outlet.

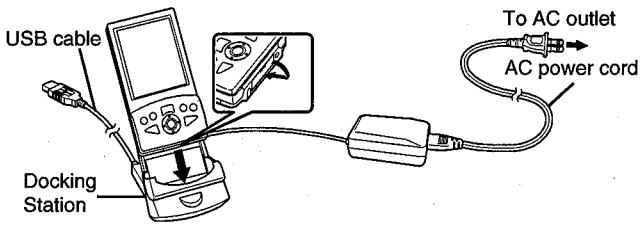

4. Open the SHARP I/O PORT cover of the Main Unit and then place the Main Unit in the Docking Station by sliding it in.
   The LED indicator on the unit (charge light) will turn amber when charging begins.
5. When the charging has been completed, the LED indicator will turn off. Then lift the Main Unit from the Docking Station and close the SHARP I/O PORT cover by pressing on the right side of the cover.

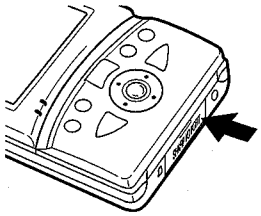

6. Unplug the AC power cord from the AC outlet and unplug the AC adapter connector from the Docking Station.

Notes:
- The USB cable of the Docking Station is used to connect the Main Unit to a PC (PC link, etc.). It is not used for charging.
- Do not tilt the Main Unit forward while it is placed in the Docking Station. Do not pick up the unit by itself. If this is done, the unit connection terminal of the Docking Station may be damaged.

6. PARTS LIST

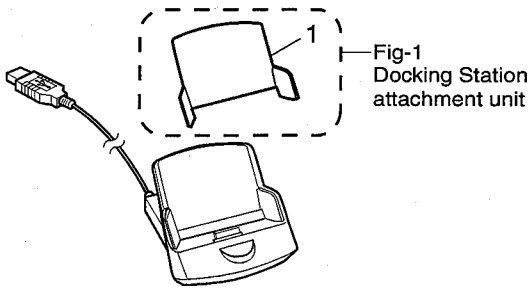

CE-ST6 (Comes with the SL-5000)

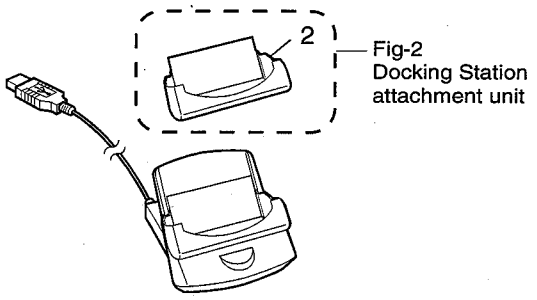

CE-ST6 (Option) CE-ST7 (Option)
CE-ST7 (Comes with the SL-5500)

No.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION	
1	DUNT-2215YCZZ	AF		E	Docking Station attachment unit	(for CE-ST6 (Fig-1))
2	0iU-ACNWC0377	AX	N	E	Docking Station attachment unit	(for CE-ST6 and CE-ST7 (Fig-2))

Note: The attachment of the Docking Station (Fig-1), which comes with the SL-5000 as an accessory, is different from the one of CE-ST7 (for SL-5500) or the one of CE-ST6 (optional sales item).
The attachment of the Docking Station (shown in Fig-1) can be replaced with the one shown in Fig-2.

The attachment unit shown in Fig-2 for CE-ST6 have improved to let the main unit sit more stable in the station than the one comes with SL-5000 main unit.
Please note that the both option units CE-ST6 with the improved attachment unit and CE-ST7 look exactly the same(except for the name plate) though these units do have no interchangeability.

COPYRIGHT © 2002 BY SHARP CORPORATION
All rights reserved.
Printed in Japan.
No part of this publication may be reproduced,
stored in a retrieval system, or transmitted.
In any form or by any means,
electronic, mechanical, photocopying, recording, or otherwise,
without prior written permission of the publisher.

SHARP CORPORATION
Communication Systems Group
Quality & Reliability Control Center
2002 February ⓣ

Printed by: Schaltungsdienst Lange, Berlin (GERMANY)